

























Quick User Guide

Thank you for choosing the Agility 3 Wireless Security System. This quick start guide describes the main user operating actions of the Agility 3. To view the full version of the user manual, please refer to our website www.riscogroup.com.




























Away (Full) Arming:

	<p>Quick mode: Press </p> <p>High security mode: Press  + code or proximity tag.</p>		<p>Quick mode: Press </p> <p>High security mode: Press  + code.</p>
	<p>Keyfob: Press  button.</p>		<p>Send SMS: Enter [Code][A], (example, 1234A).</p>
	<p>Web Application: Click Full Arm.</p>		<p>Smartphone: Press .</p>

Stay (Home) Arming:

	<p>Quick mode: Press </p> <p>High security mode: Press  + code or proximity tag.</p>		<p>Quick mode: Press </p> <p>High security mode: Press  + code.</p>
	<p>Keyfob: Press  button or button 4 (if installer defined).</p>		<p>Send SMS: Enter [Code][H], (example, 1234H).</p>
	<p>Web Application: Click Part Arm.</p>		<p>Smartphone: Press .</p>

Partition Arming:

	<p>Quick mode: Press    >  </p>		<p>Quick mode: Press    >  </p>
	<p>High security mode: Press    >   + code or proximity tag.</p>		<p>High security mode: Press    >   + code.</p>
	<p>Press  button or button 4 (if installer defined).</p>		<p>Send SMS: Enter [Code] [A or H] [Partition 1, 2 or 3].</p>












View Last Alarm:

Hold button  for two seconds.


















View System Status:

Short/long press on : LCD display.

System Disarming:

 <p>Press  followed by code or proximity tag.</p>	 <p>Quick mode: Press . High security mode: Press  > Code.</p>
 <p>Press the  button.</p>	 <p>Send SMS: Enter [Code][D] (example 1234D).</p>
 <p>Web Application: Enter user code and click Disarm.</p>	 <p>Smartphone: Press .</p>

Partition Disarming:

 <p>Press // >  > code or proximity tag.</p>	 <p>Quick mode: Press // > .</p> <p>High security mode: Press // >  > code.</p>
 <p>Press the  button. All partitions assigned to the button will be disarmed.</p>	 <p>Send SMS: Enter [Code][D] [Partition 1,2 or 3] (example 1234D1).</p>








Duress Disarming:

Press  followed by duress code.

Quick Zones Bypass

Press  > [Code]  [Zone No.]  [Define] .

Panic Alarm:

 <p>Press both  and  keys simultaneously.</p>	 <p>Press both  and  keys simultaneously.</p>
 <p>Press the small blank button (if installer defined).</p>	

Fire Alarm:

Press   simultaneously for 2 seconds.

Emergency/Medical Alarm:

Press   simultaneously for 2 seconds.




Define Follow-Me:

Press  > [Code]  [Follow Me]  [Define] .

System Chime On/Off:

Press the button  for 2 seconds.

Output Control

Press button // for 2 seconds.

LED Indicators:

 **Power LED (Green)**

On: Power OK.

Rapid Flash: AC trouble.

Slow Flash: Low battery trouble.

 **Trouble LED (Orange)**

Rapid Flash: Trouble.

Off: No trouble.

 **Arm/Alarm LED (Red)**

On: System armed.

Rapid Flash: Alarm.

Slow Flash: System in Exit Delay.

 **Stay LED (Red)**

On: System armed at STAY.

Off: System disarmed.

Ready LED (Green)

On: System ready.

Off: Open zones.

Slow Flash: Ready to arm with open entry/exit zone.

Sound Indicators:

Intrusion alarm: Continues rapid beeping.

Fire alarm: Staggered rapid beeping.

Exit delay: Slow buzzer beeps until the Exit Delay time period expires.






Entry delay: Slow buzzer beeps until the Entry Delay time period expires.

Confirm operation: A one-second tone.




Reject operation: Three rapid error beeps.

Arm/Disarm squawk: 1 siren chirp: System armed,
2 siren chirps: System is disarmed,
4 siren chirps: System disarmed after an alarm.

Edit User Codes:

1. Press  and enter your code.
 2. Scroll to the option Codes/Tags and press .
 3. Scroll to User Codes/Tags and press .
 4. Select the option New/Change and press .
 5. Scroll to select the User Index number to which you want to assign a user code and press.
 6. Enter and re-enter the new code followed by .
 7. Repeat the above steps for additional codes.
-

Assign Proximity Tag:

1. Follow steps 1-3 of the Edit User Code above.
 2. Scroll to Proximity Tags and press .
 3. Select the option New/Change and press .
 4. Scroll to the User Index number to which you want to assign a tag and press .
 5. Within 10 seconds, hold the proximity tag at a distance of 1 to 2 cm from the keypad's keys.
 6. Repeat the above steps for additional codes.
-

SMS Control Commands (not available during Cloud mode)

Full Arm: [Code][A] (example 1234A)	Un-bypass Zone: [Code][UB][Zone No.]
Home Arm: [Code][H] (example 1234H)	Activate Output: [Code][UOON][UO No]
Full Disarm: [Code][D] (example 1234D)	Deactivate Output: [Code][UOFF][UO No]
Partition Arm: [Code][A][Partition No.]	Get system status: [Code][ST]
Partition Disarm: [Code][D][Partition No.]	Get last alarm memory: [Code][AL]
Bypass Zone: [Code][B][Zone No.]	Get SIM credit level: [Code][CR]

Telephone Control Commands (not available during Cloud mode)

Receiving a call:

1. Pick up the phone.
2. Say "Hello" or press [#]. You will hear an event announcement message.
3. Acknowledge the event (See Acknowledgment menu).

Acknowledgment menu:

- Acknowledge message: Press [1]
Acknowledge and stop all dialing: Press [2] [User code] [#]
Access Operations menu: Press [3] [User code] [#]
Listen and Talk: Press [6] [User code]
Repeat the event message: Press [#]
Repeat the Acknowledgment menu: Press [*]

Register to RISCO Cloud

Registering to RISCO Cloud enables you to monitor, control and configure your Agility 3 system from any location.

1. Go to www.riscocloud.com/register.
2. Fill in your first name and last name.
3. Enter your email address as Login Name (required for 1st time activation).
4. Define password (minimum of 6 characters and at least one digit) and confirm.
5. Enter in the 15 digits Panel ID as it appear on the sticker located on the side of the panel or as printed on the postcard that arrived with the panel.
6. Complete registration form and press the Register Button.
7. To complete registration open the email message received on the email account you defined as Login Name.

Login to RISCO Cloud

1. Go to www.riscocloud.com.
2. Enter User Name and Password (same as supplied during the registration process).
3. Enter Passcode (Agility User Code).
4. Click the Enter button.

iRISCO – RISCO's Smartphone Application

Homeowners can now enjoy the iRISCO Smartphone app for smart and easy control of their Agility 3 system from any location.

Download the iRISCO app from the Apple App store or Android Play Store.